



1 HORIZONTAL INSTALLATION

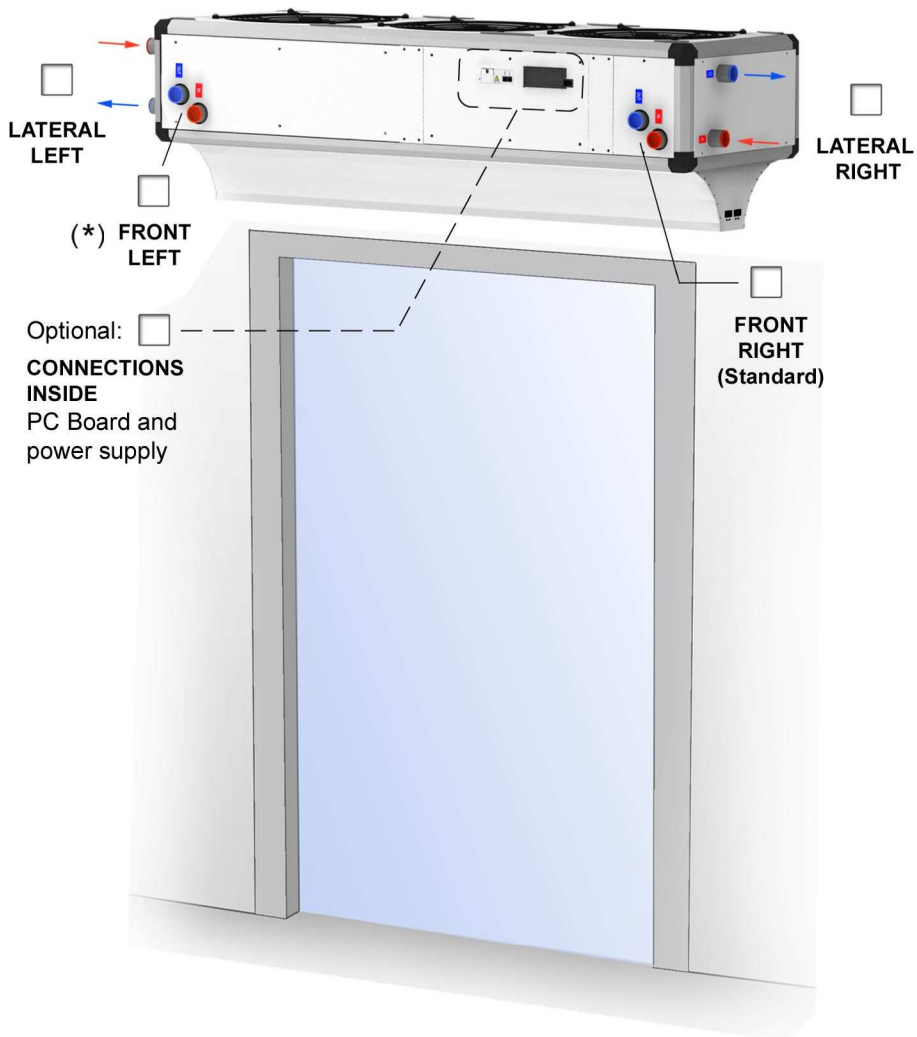

2 VERTICAL INSTALLATION

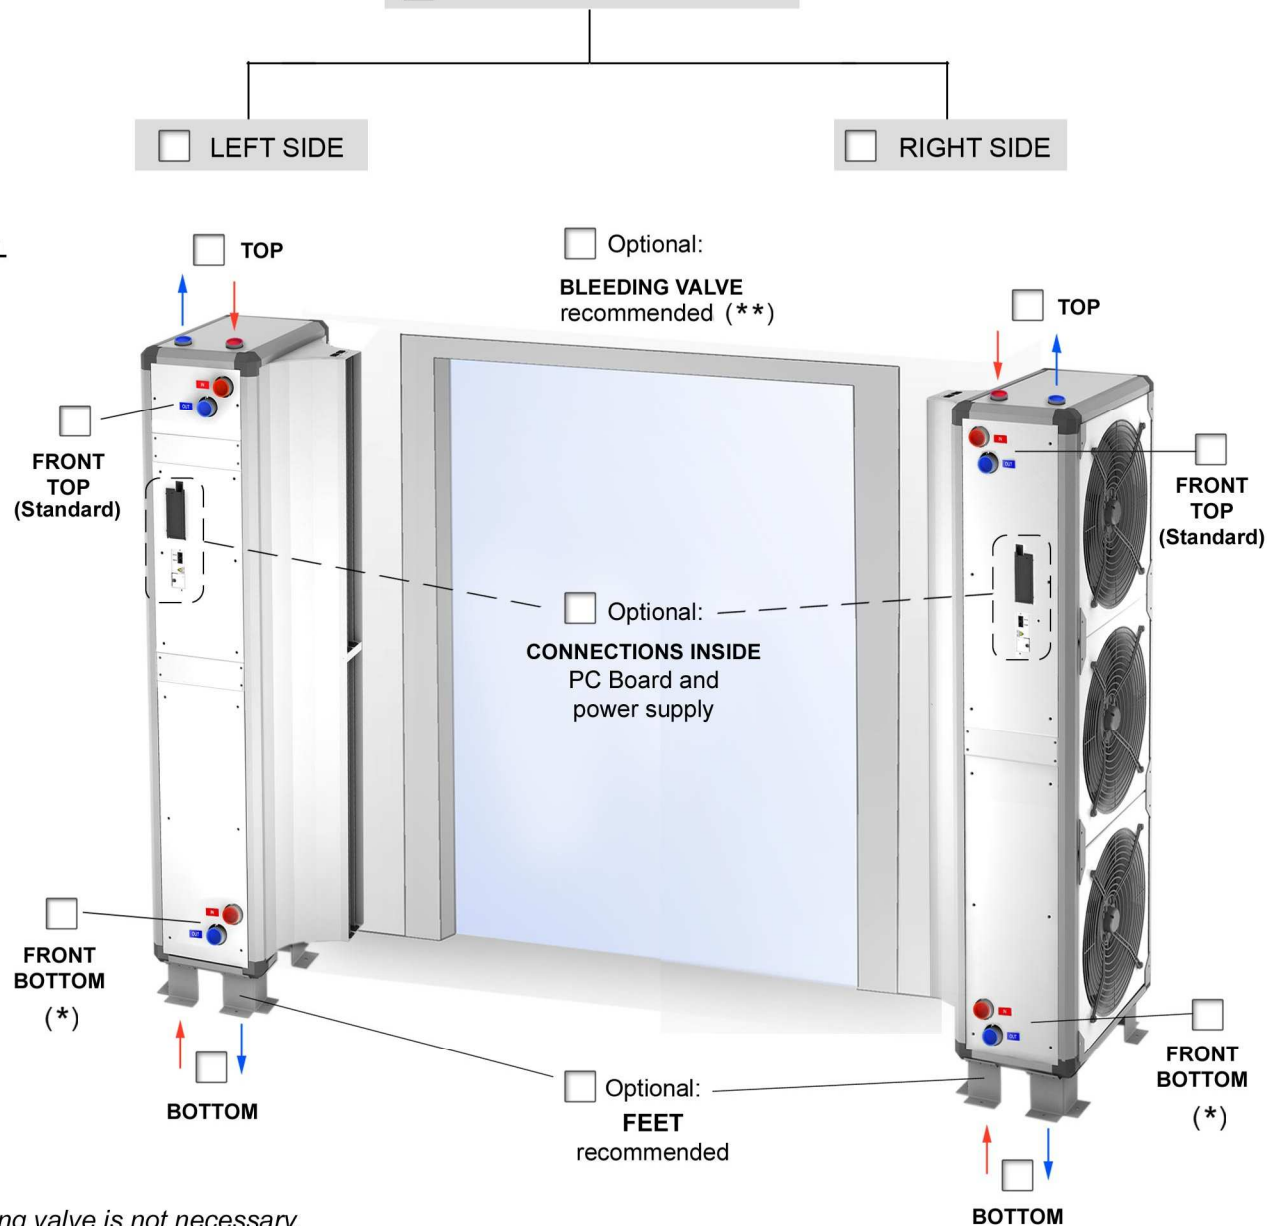

Standard or (*) without price increasing

(**) On P86 "top" and "front top" options (except from length 1000), bleeding valve is not necessary. In all other coils and options in vertical installation, bleeding valve is recommended in order to achieve the maximum power heating avoiding air inside the coil.