


**1**  HORIZONTAL INSTALLATION



**2**  VERTICAL INSTALLATION

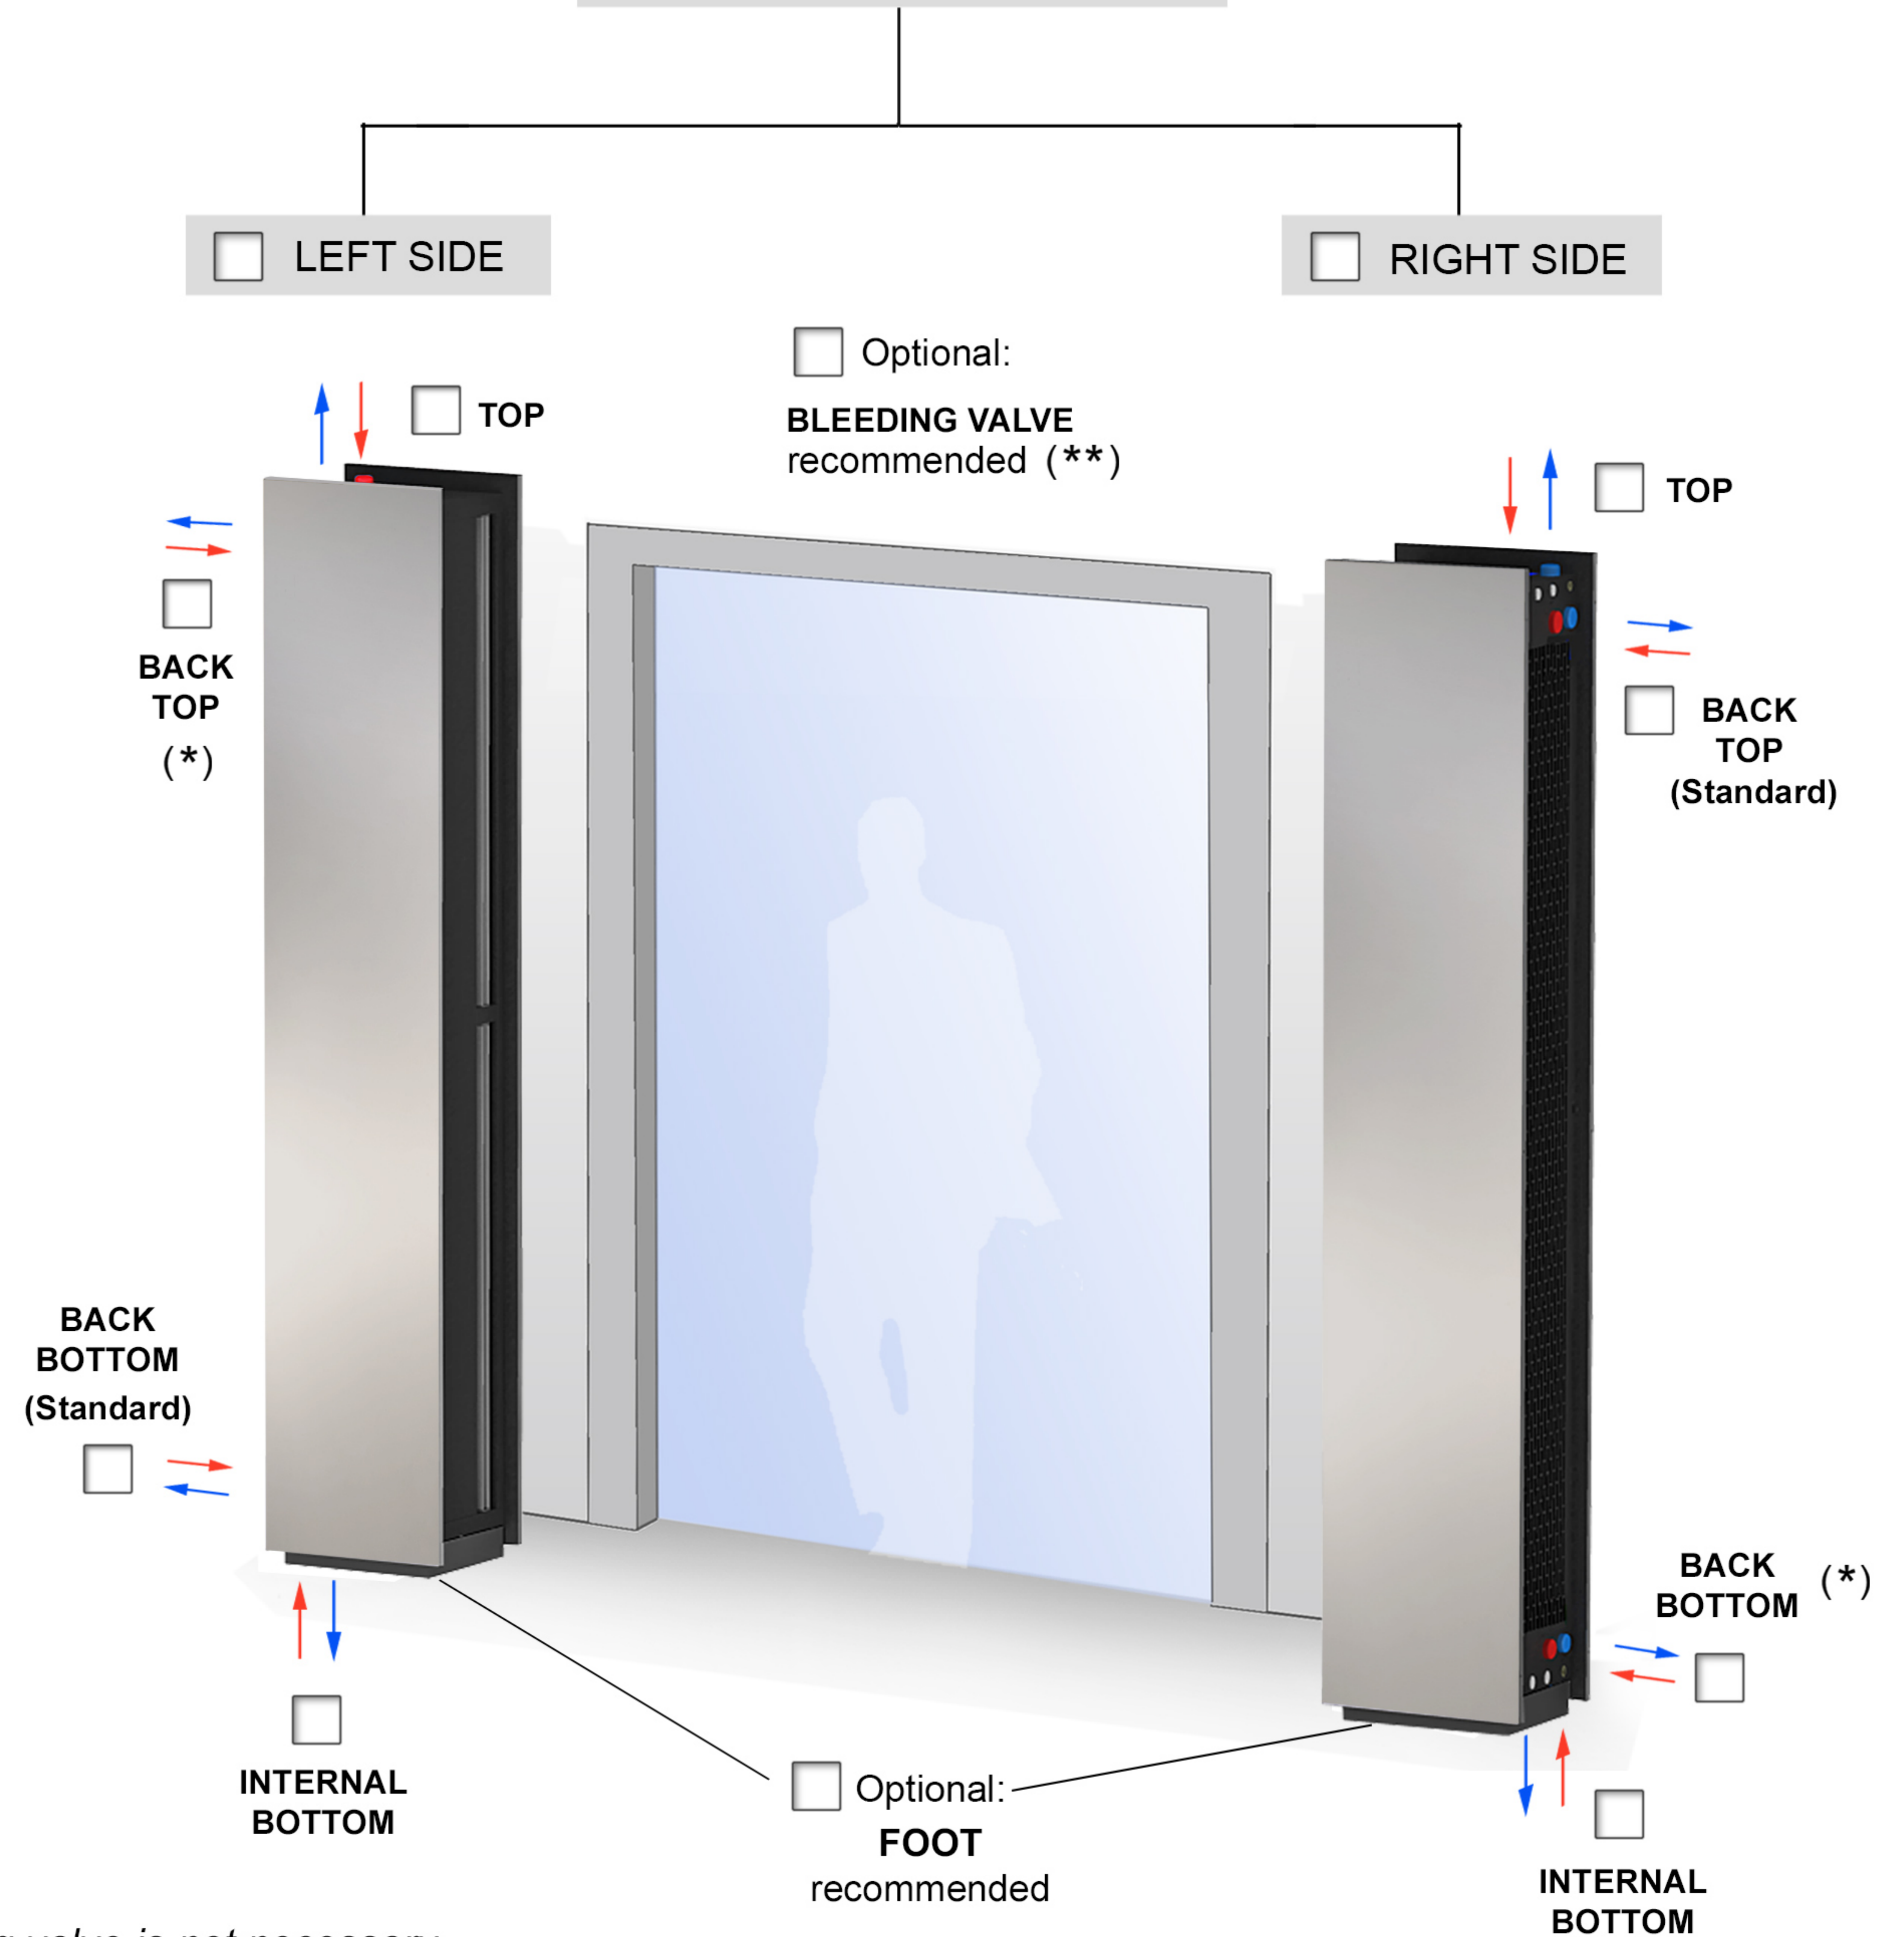

Standard or (\*) without price increasing

(\*\*) On P86 "top" and "back top" options (except from length 1000), bleeding valve is not necessary. In all other coils and options in vertical installation, bleeding valve or special vertical circuits are recommended in order to achieve the maximum power heating avoiding air inside the coil.